


Mat. - Nr. - Konstante
3740


Gebrauchsanweisung
58 3762
(IT)

Programmtabelle
58 3763
(IT)

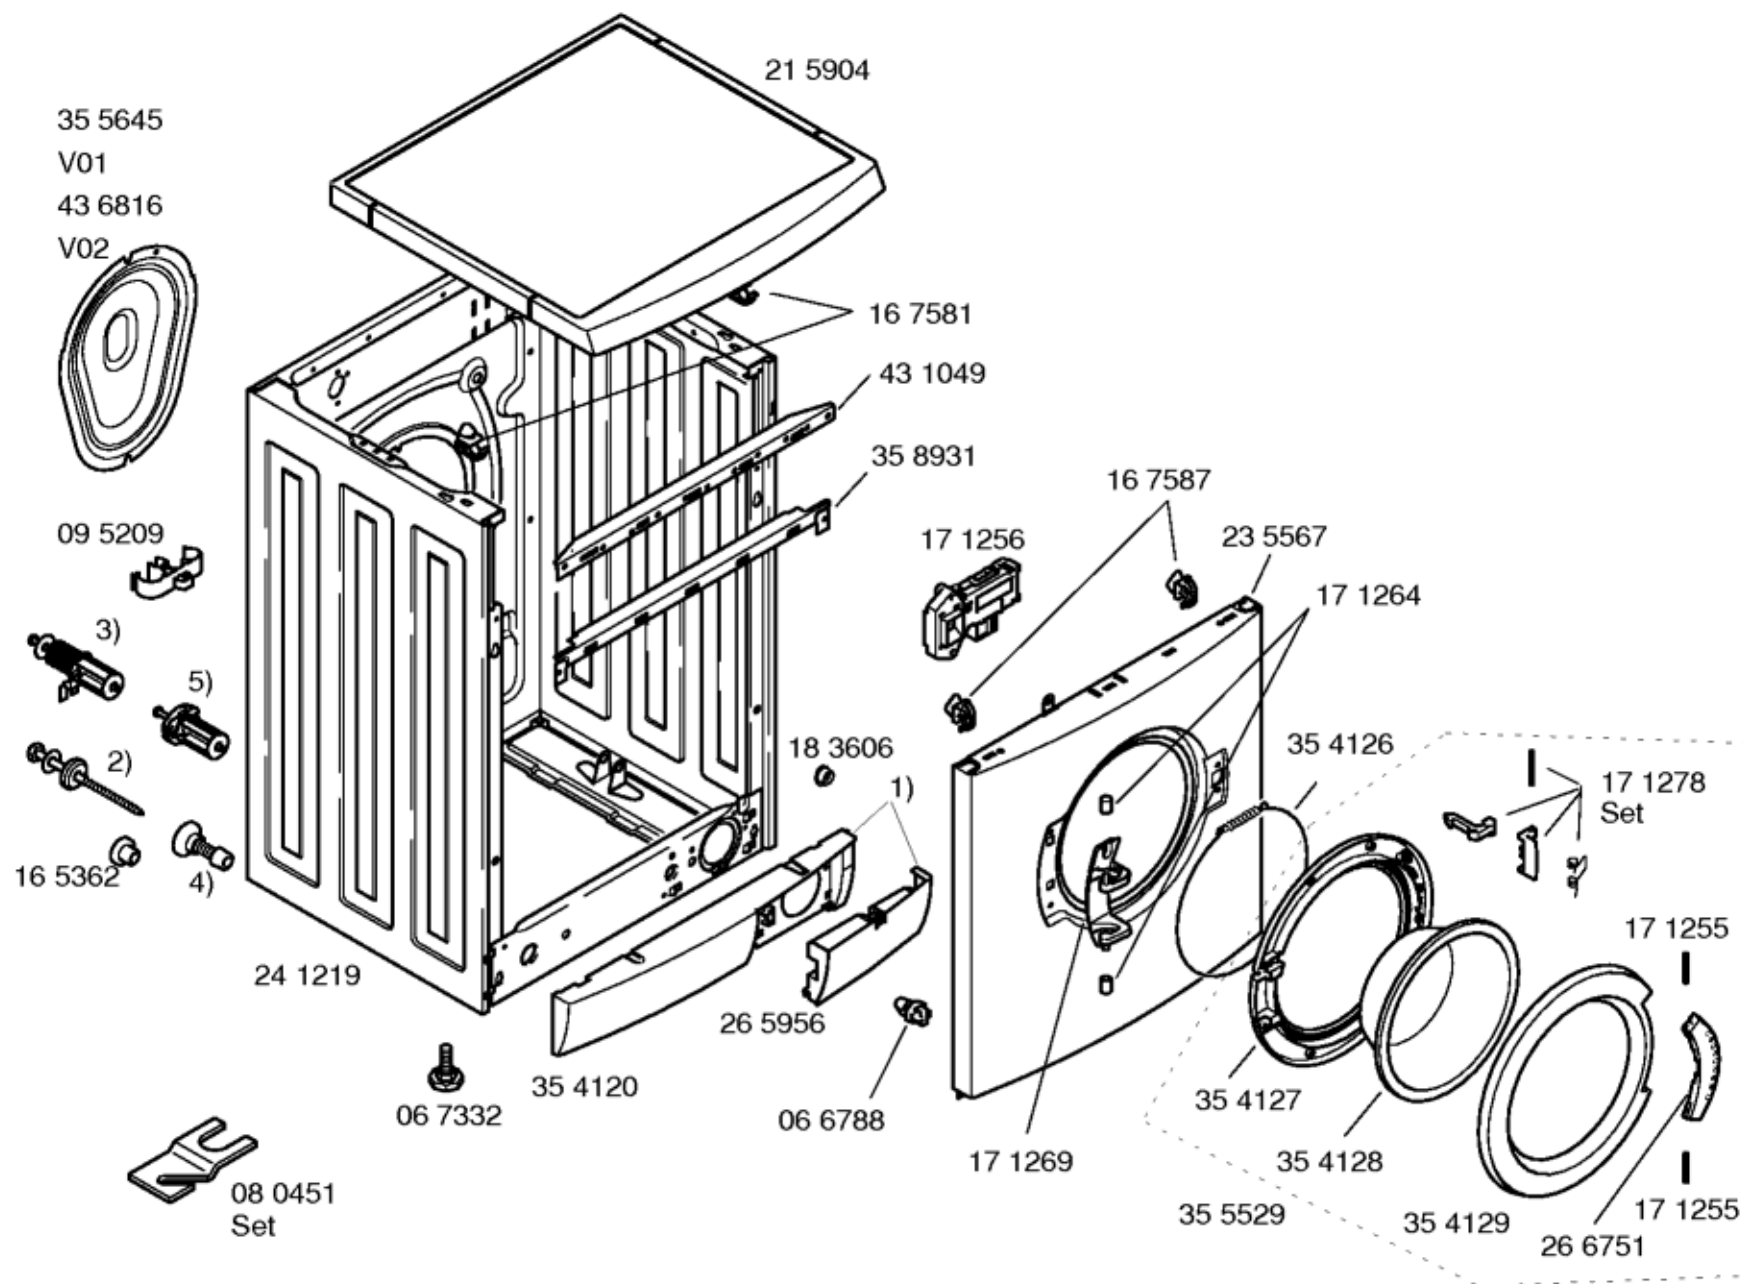

Mat. - Nr. - Konstante
3740


- 1) 35 5528
- 2) 16 8813
V01
- 3) 18 6869
V02
- 4) 16 8814
V01
- 5) 18 6870
V02

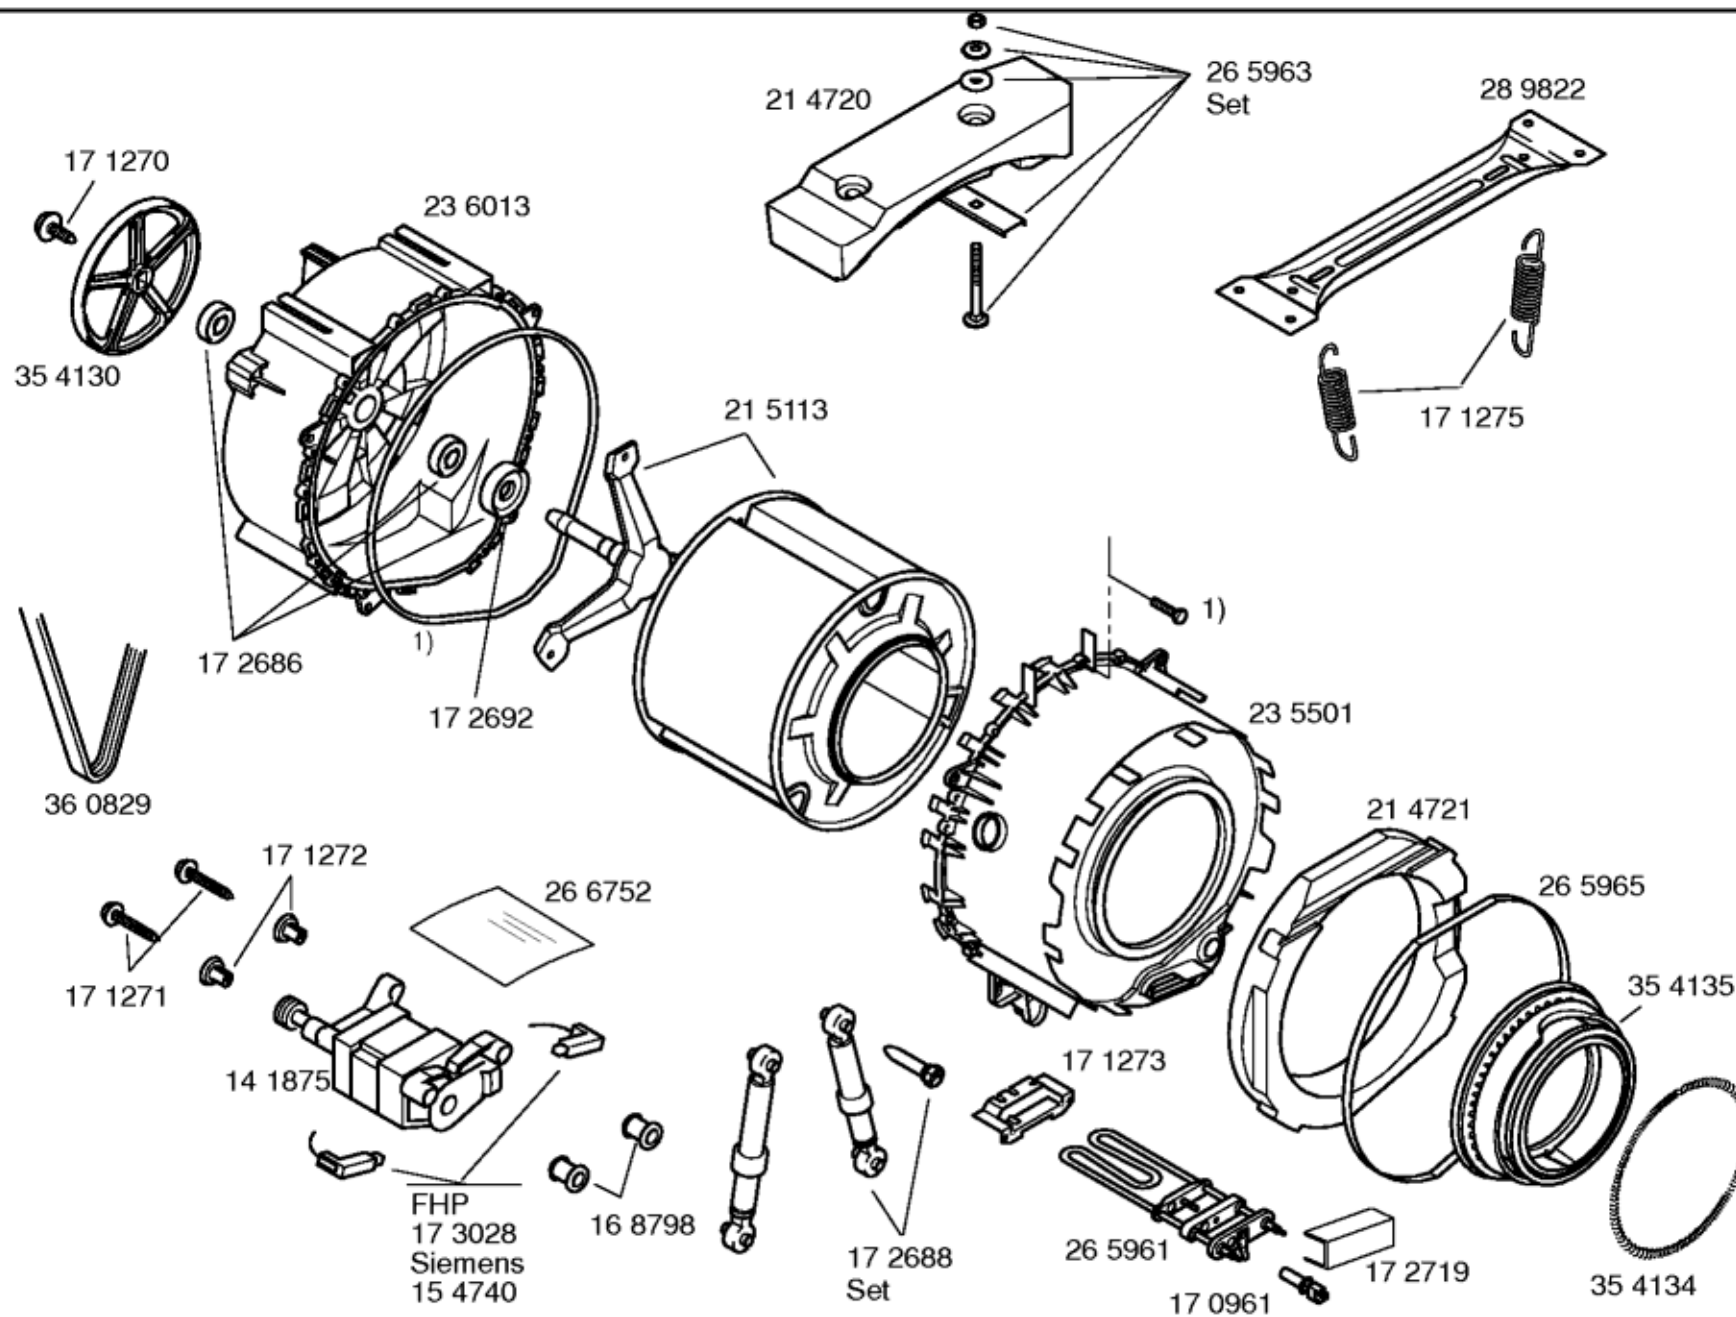

Mat. - Nr. - Konstante
3740

1) 26 5964
Set

Mat. - Nr. - Konstante
3740

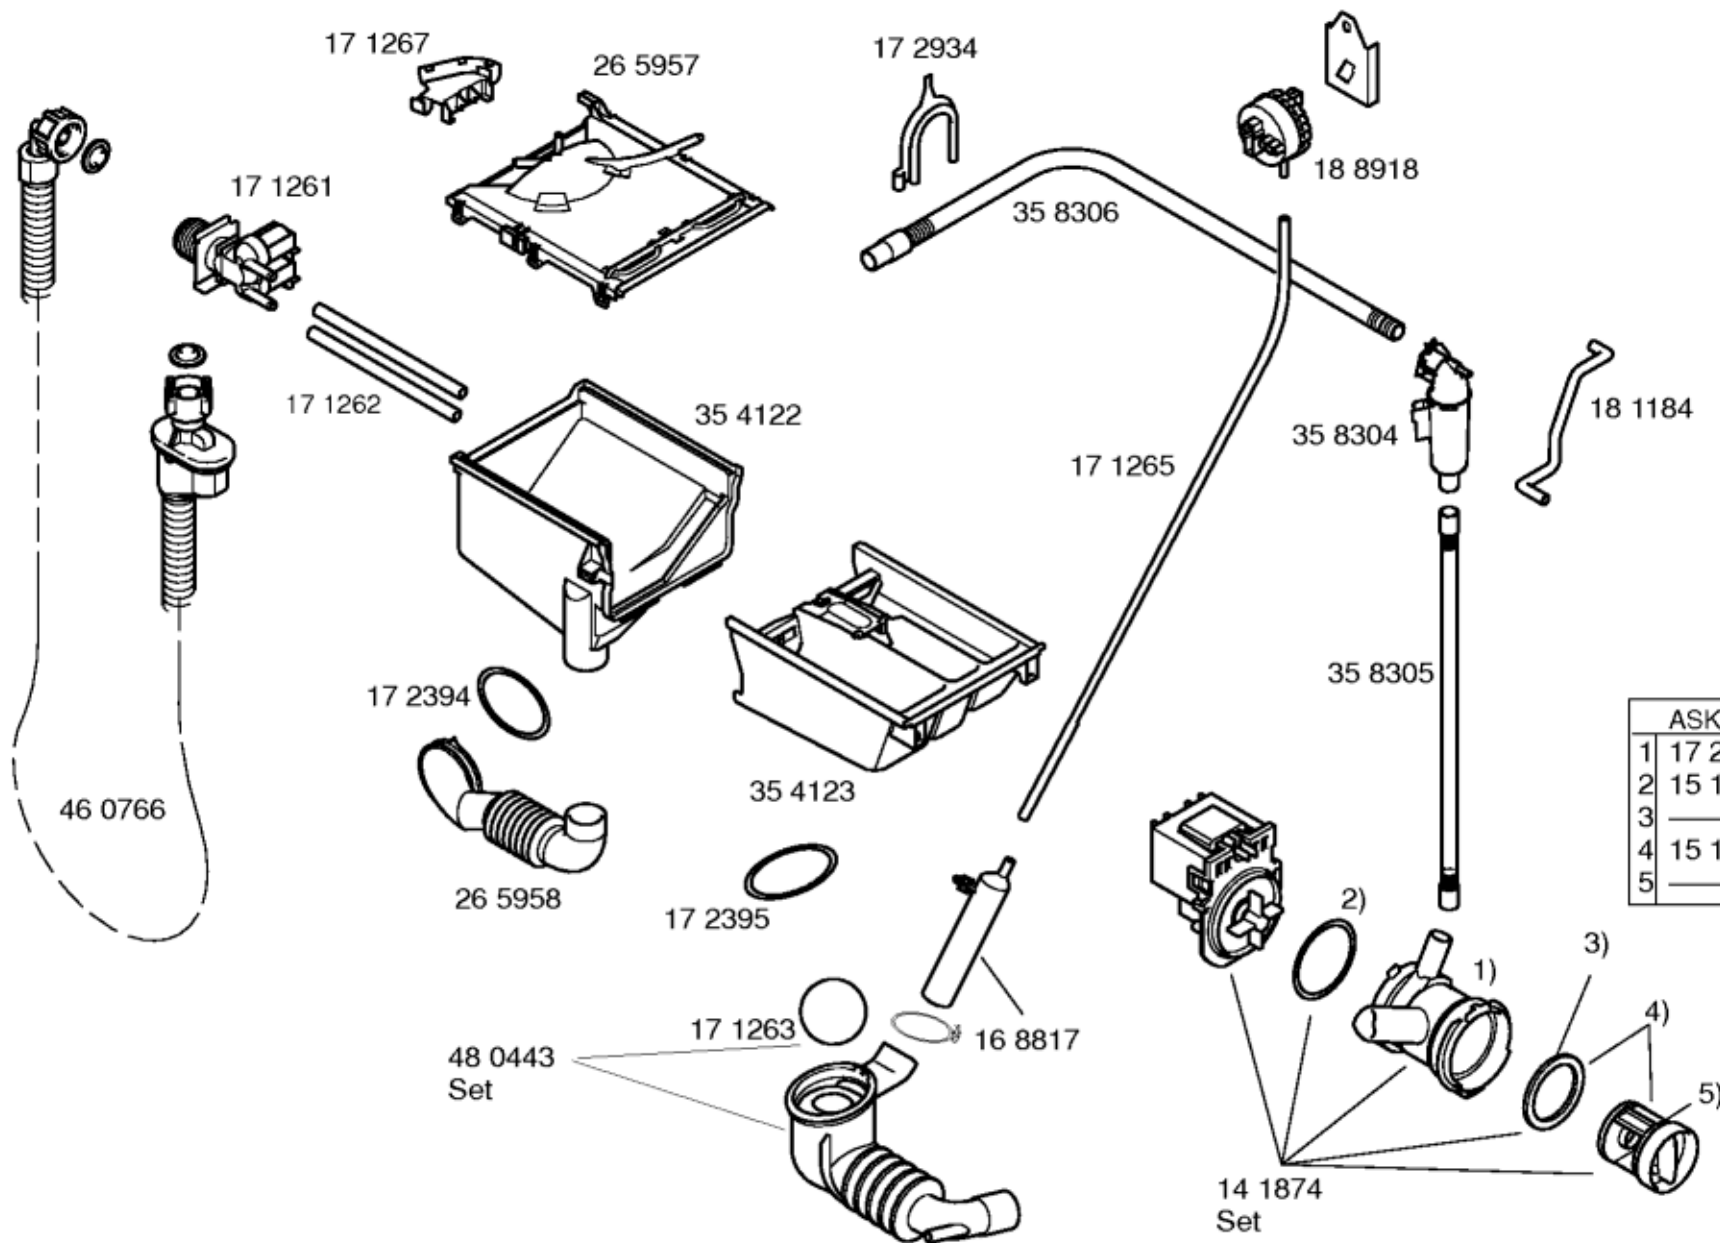

	ASKOLL	COPRECI
1	17 2340	17 2337
2	15 1408	15 4358
3	_____	172338
4	15 1409	_____
5	_____	17 2339

Position ID	Spare part no.	Replacement	Description
0001	00067332	00621463	Foot
0002	00084713	00655300	Holder
0003	00095209		Holder
0004	00141874	00145787	Pump-drain
0005	00141875	00144797	Motor
0006	00163750		Ball bearing
0007	00171253	00481580	Power cord
0009	00165362		Cover
0010	00167587	00067083	Holder
0011	00168813		Transit bolt
0012	00168814	00600388	Distance holder
0013	00170961		Sensor-NTC
0014	00171254	00623842	Capacitor-interference suppre.
0015	00171256	00182154	Electric lock
0016	00171261	00428210	Valve-magnet
0017	00171262		Hose-valve/soap box
0018	00171265	00491919	Hose-pressure chamber
0019	00171267		Holder
0020	00171270		Screw
0021	00171271		Screw
0022	00171272		Fixture
0023	00171273		Holder
0024	00171275	00606818	Spring-tank
0025	00172394	00421488	fastening ring
0026	00172395	00603523	fastening ring
0028	00214720		Weight
0029	00214721	00773470	Weight

0030	00215113	00773699	Drum
0031	00235501	00715100	Tub
0033	00235567		Front panel
0034	00265958		Hose-fill
0035	00265961		Heating element
0036	00265965		Band
0037	00266752		Cover
0038	00289822		Support
0039	00354126	00439671	fastening ring
0040	00354130	11002942	Pulley
0041	00354134		fastening ring
0042	00354135		Boot gasket
0044	00355529		Window
0045	00355645		Case-rear part
0046	00358304		Container return
0047	00358305		Hose
0048	00358306		Outlet hose
0049	00358931	00435791	Rail
0050	00360829	00439490	Belt-drive
0052	00460766	11007861	Aquasecure
0053	00480443		Eco-hose-sump
0054	00488255	00432218	Control module
0055	00172698		Coupling
0056	00172697		Coupling
0061	00215904		Worktop